

Garage Door Sensor Troubleshooting Quick Guide

Quick Reference Guide | garagedoorsberintek.ca

Step 1: Check both sensor lights - both should be solid

Step 2: Green solid + amber blinking = misalignment

Step 3: Loosen bracket, pivot sensor until light goes solid, retighten

Step 4: Wipe both sensor lenses with dry microfibre cloth

Step 5: Check for afternoon sunlight hitting the receiving sensor

Step 6: Walk the wire from sensor to opener, look for breaks or loose terminals

Step 7: Power-cycle opener \ (unplug 10 seconds, replug\)

Step 8: If blinking continues after all steps, sensors may need replacement

Sensor lifespan: 8-12 years typical

Replacement cost: \$25-\$75 per sensor

Use hold-down button only as temporary workaround - not a permanent fix

Contact Berintek: garagedoorsberintek.ca | Ottawa area service